

In Win HALO Driver Instructions

1. Please click "setup" to install the 'HALO' driver.
2. After downloading the "HALO" driver on the desktop, please click to open it.
3. When you enter into the "HALO" driver interface, the setting mode is automatically ON, and you can adjust the functions as seen below:

4. Function descriptions:

Solid Color

Only shows one color

Strobing

Flashes on & off

Breathing

Fades in & out with one color

Colorful Breathing

Fades in & out between 7 colors

Color Cycle

Fades between the colors of the rainbow

Personalized

Personalize your own lighting effect. If you want to redo an already created effect, just click "Clear" and it will go back to the default setting.

5. If you don't need to use the "HALO" driver, just click "ON" again, then the lighting functions will shut down immediately.
6. To close the "HALO" driver, please find the icon on the right bottom corner of your desktop, and then press right click to exit.

PS. The HALO driver is compatible with systems running Windows 7 OS or higher.

