


# The instructions for 805 Infinity LED module and RGB-strip

## 805 Infinity : LED燈光模組 & RGB燈條 操作說明

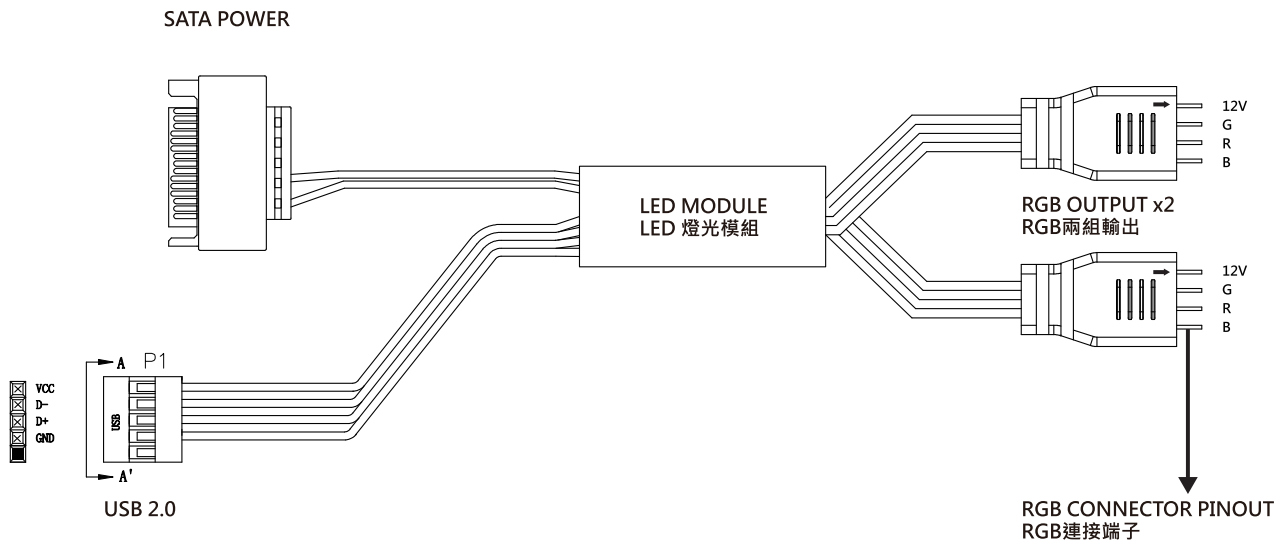

**Note:** If only one RGB output connector is used, please remove any additional RGB connectors in order to prevent a short circuit.  
**重要提醒:** 若只使用一組RGB輸出端，請拔除另一組RGB連接端子，以防輸出短路。



If your motherboard DOES NOT support the RGB luminous effect:


Please connect RGB-strip with the In Win LED module, and insert both SATA POWER and USB headers to the corresponding slots. After that, you need to download the driver- "HALO" from In Win's 805 Infinity official website, and implement the setup file to activate the lighting effect.

若您的主機板無支援RGB燈光輸出功能：

請將RGB燈條與In Win LED燈光模組連接起來，再將SATA POWER及USB連接到相對應的位置，並至In Win 805 Infinity官網頁面下載「HALO」軟體驅動程式，再執行安裝檔來啟動燈光控制功能。

RGB OUTPUT  
RGB 輸出

RGB - Strip  
RGB 燈條

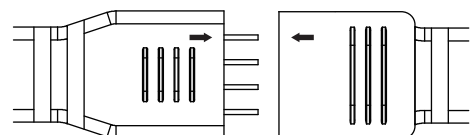

★ Please connect the arrow to the arrow.  
★ 請將箭頭與箭頭串接



If your motherboard DOES support the RGB luminous effect (like the ASUS AURA series): Just insert the RGB-strip into the 4-pin RGB-strip header directly on the motherboard.

有支援RGB燈光輸出功能(如ASUS AURA系列)：  
直接將RGB燈條插入主機板4針腳的RGB燈條插座即可。

